
SN01 - SUPPORT WITH SPHERICAL JOINT

DESIGNED TO FIX: LASTS FOR FOOTWEAR, HEELS, SOLES

(Compatible with products SCANNY3D BASE, SCANNY3D MAX, SCANNY3D MINI)

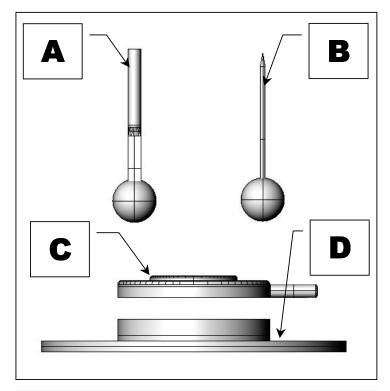

A = hinge for implantation of lasts or other big objects


B = hinge for implantation of heels or other small objects

C = blocking ring

D = bottom plate

E = angle of maximum rotation (about 30 degrees)



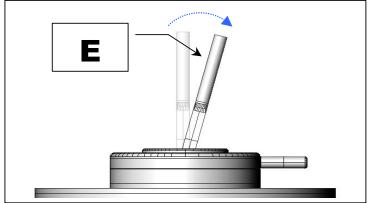




MAINTENANCE AND SETTINGS

IN ORDER TO KEEP THE **SN01** SUPPORT FULL OPERATIVE PLEASE FOLLOW THE RULES BELOW:

Clean the hinges:

It is recommended to keep the hinges (and the spheres) always clean; the hinges should have an opaque black colour; after a long time the black colour could vanish; in this case cover the hinge with a black opaque paint; in this way the scanning process will be more easy because the metal doesn't reflect the scanner's laser beams;

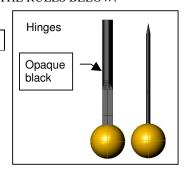



IMPORTANT: Handling Precautions:

The hinges could be dangerous, especially the small tip; during the usage don't keep the tips toward you. To use safety gloves it is recommended.